



Installation Guide

Screws 2G (2.2mm x 19mm)
or 1/16th (3.0mm x 19mm)

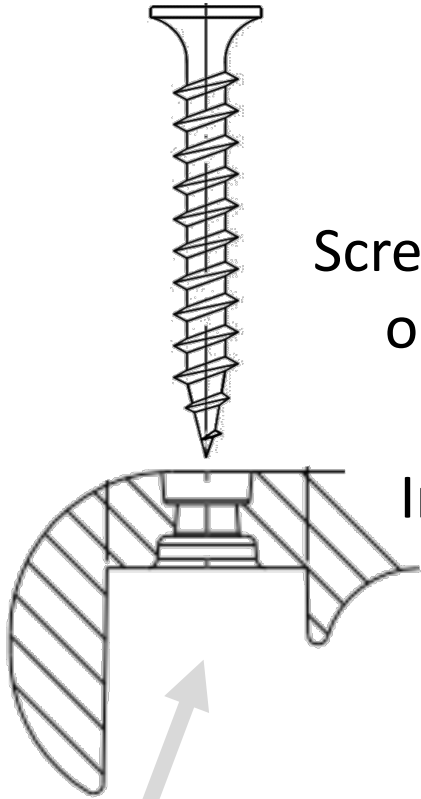

Installation Points

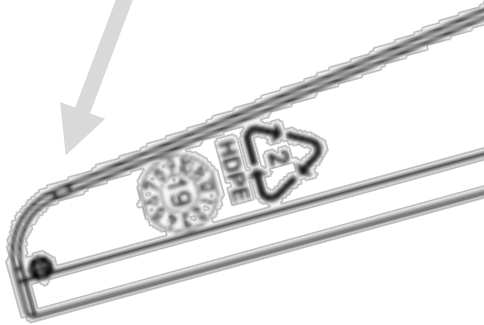


CAUTION

Clean all surfaces using alcohol
Pre-drill all holes into oars
Heat surfaces with hot air / hair drier
View online fitting videos

randallfoils.com

HELP info@randallfoils.com

USE HOT GLUE
ALONG ATTACHMENT GROOVE

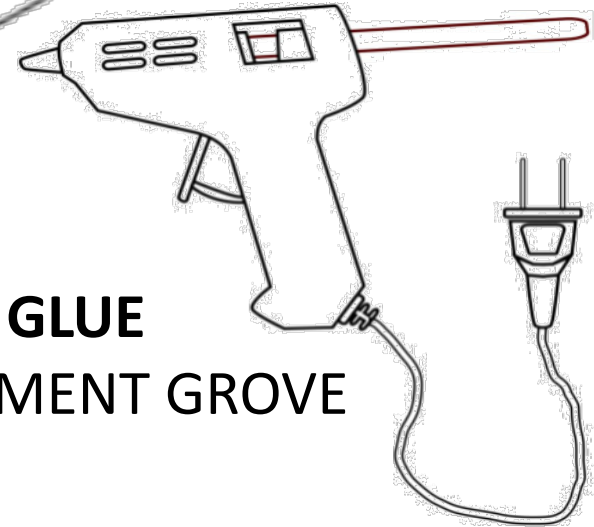



RANDALLfoil

CAUTION

Use HOT GLUE along the entire length of attachment groove
Use TAPE or CLAMPS to secure in place while screwing

Concept 2 – HEAT FOIL TO SOFTEN PLASTIC
– MOULD TO SHAPE OF BLADE
– DO NOT OVERLAP VORTEX STRIP

Additional screws may be added

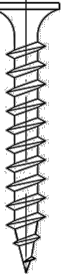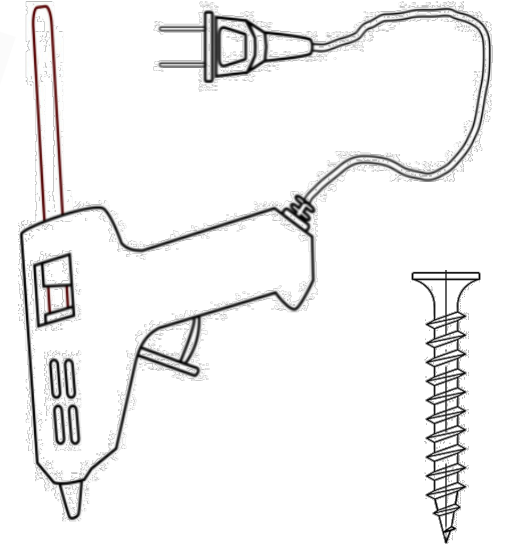

Online Installation Videos